


## HOW TO UPDATE THE GENIE-UNIVERSAL SD-CARD CONTENT

- Connect Genie-Universal with mini-usb cable to PC
- On Genie-Universal, press right Function-Button (Mode) and select "USB DISK" – PC will detect Mass Storage Device
- Start Genie Update Client from Genie Suite, or directly by starting GenieClient.exe
- Click "Get Drive" and select your Genie SD-Card (GENIE10xxxx - FAT32)
- Now click UPDATE, this will load the latest files to your Genie-Universal

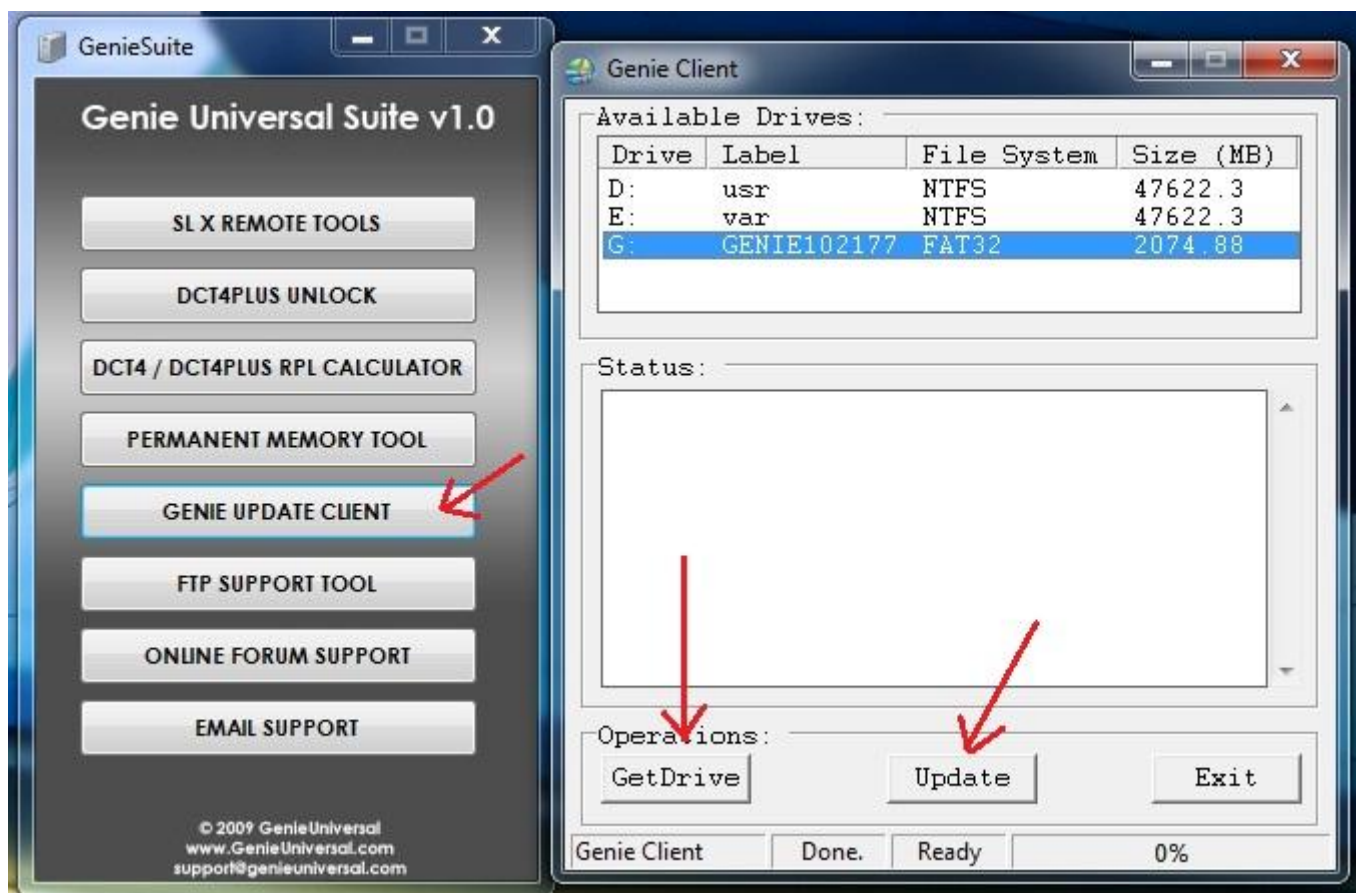


Now you have updated all the files on the SD-Card to the latest version.

Next step is to UPDATE THE FIRMWARE of the Genie Universal.

## HOW TO UPDATE THE GENIE-UNIVERSAL FIRMWARE

- Be sure you have updated the Genie-Universal SD-Card Files to latest Version (see above)
- Connect the original Genie-Universal Charger (9V) to the Genie-Universal (PLEASE NOTE: The update will not start if there is no charger connected)
- On Genie-Universal, press right Function-Button (Mode) and select "FIRMWARE UPDATE"

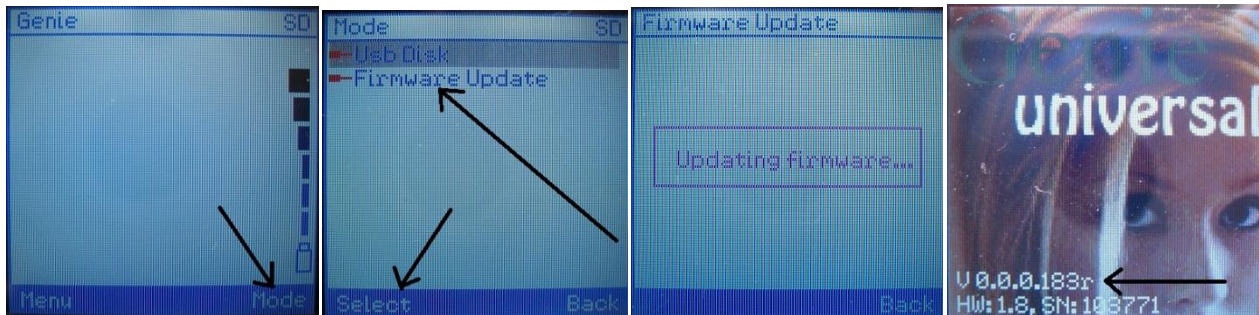

Genie-Universal will show on the LCD "Updating Firmware..." and will restart after 5-7 seconds with latest Firmware Inside.

In case the clip doesn't restart or it looks like it hangs on the Firmware update, don't panic, just reset the Device with a small needle or similar tool on the backside of the Device (you'll see a small hole below the Serial Number Sticker).



If you get "FILE ERROR:7" when trying to update the Firmware, then don't worry, it just means that your Genie-Universal already have the latest Firmware/OS installed and there is no need to update it again.