



HOW TO CREATE A NEW GENIE-UNIVERSAL SD-CARD

In case you have problems with the SD-Card of your Genie-Universal or you have lost the SD-Card content for some reason , here´s how to prepare a new SD-Card for Genie-Universal.

If you need to buy a new SD-Card, please be sure it´s a 1GB or 2GB "good-quality" SD-Card.

If you don´t have the original content of your SD-Card, then please send an email with your Genie-Universal Serial Number to support@genieuniversal.com

The Support Team will sent you the content as soon as possible to your email(.zip file).

Procedure how to put the Content to the SD-card:

1. Put SD Card into external Reader/Writer
2. Format the new SD-Card to FAT32 and rename it to "GENIE10xxxx" (xxxx are the last 4 digits of your Genie-Universal Serial Number, eg: GENIE101234)
3. Extract the Content from the .zip file to the SD-Card
4. Put SD Card back to Genie.

- Disconnect Battery and external Power from Genie-Universal
- Connect Genie-Universal with mini-usb cable to PC
- On Genie-Universal, press right Function-Button (Mode) and select "USB DISK" – PC will detect Mass Storage Device
- Start Genie Update Client from Genie Suite, or directly by starting GenieClient.exe
- Click "Get Drive" and select your Genie SD-Card (GENIE10xxxx - FAT32)
- Now click UPDATE, this will load the latest files to your Genie-Universal